

# Instruction Manual

---

## HI 93414 Turbidity and Free/Total Chlorine Meter



Dear Customer,

Thank you for choosing a Hanna Instruments product. This manual will provide you with the necessary information for correct use of the instrument.

Please read this instruction manual carefully before using the instrument.

If you need additional technical information, do not hesitate to e-mail us at [tech@hannainst.com](mailto:tech@hannainst.com) or see the back side of this manual for our worldwide sales and technical service contacts.

This instrument is in compliance with **CE** directives.

## WARRANTY

**HI 93414** is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained according to instructions. This warranty is limited to repair or replacement free of charge.

Damage due to accidents, misuse, tampering or lack of prescribed maintenance is not covered.

If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization number from the Technical Service Department and then send it with shipping costs prepaid. When shipping any instrument, make sure it is properly packed for complete protection.

To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase.

## TABLE OF CONTENTS


WARRANTY .....	2
PRELIMINARY EXAMINATION .....	3
GENERAL DESCRIPTION .....	4
TAG IDENTIFICATION SYSTEM .....	5
ABBREVIATIONS .....	5
PRINCIPLE OF OPERATION .....	6
FUNCTIONAL DESCRIPTION .....	9
SPECIFICATIONS .....	12
GENERAL TIPS FOR AN ACCURATE MEASUREMENT .....	14
RANGE SELECTION .....	21
MEASUREMENT PROCEDURE .....	22
CALIBRATION PROCEDURE .....	28
LOGGING .....	37
GOOD LABORATORY PRACTICE (GLP) .....	40
SETUP .....	42
LCD BACKLIGHT .....	46
TAG INSTALLATION .....	47
LAMP REPLACEMENT .....	47
BATTERIES MANAGEMENT .....	48
PC INTERFACE .....	50
ERROR CODES .....	50
ACCESSORIES .....	51
RECOMMENDATIONS FOR USERS .....	51

## PRELIMINARY EXAMINATION

Please examine this Product carefully. Make sure the instrument is not damaged. If any damage has occurred during the shipment, please notify your dealer.

This **HI 93414** Portable Turbidity and Free/Total Chlorine meter is supplied complete with:

- Five Sample Cuvets and Caps
- Calibration Cuvets for turbidimeter
- Calibration Cuvets for colorimeter
- Silicone Oil
- Tissue for wiping the cuvetts
- Five Tag holders with Tags (HI 920005)
- Scissors
- Batteries (4 pcs.)
- AC Adapter
- Instruction Manual
- Instrument Quality Certificate
- Rigid carrying case

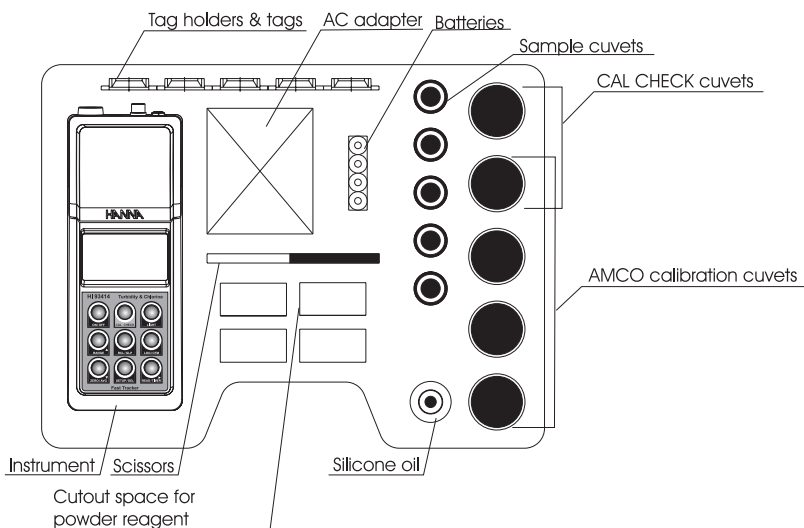

**Note:** Save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in the original packing with the supplied accessories.

## GENERAL DESCRIPTION

**HI 93414** is a high accuracy, combined meter that benefits from Hanna's years of experience as manufacturer of analytical instruments.

The **HI 93414** successfully combines turbidity and colorimetric measurements to meet the needs of measuring the most important parameters of drinking water: turbidity and free/total chlorine. The meter is especially designed for water quality measurements, providing reliable and accurate readings on low turbidity and chlorine values. The **HI 93414** meets and exceeds the requirements of **USEPA** and **Standard Methods** both for turbidity and colorimetric measurements.

The instrument is based on a state-of-the-art optical system which guarantees accurate results. The optical system, consisting in a tungsten filament lamp, three detectors (scattered, transmitted for turbidimeter range and one for colorimeter range), and a narrow band interference filter @ 525 nm assures long term stability and minimizes stray light and color interferences. It also compensates for variations in intensity of the lamp, making no need for frequent calibration.

The 25 mm round cuvetts made from special optical glass guarantee the repeatability and consistency of the measurements.

*Turbidity measurements* can be made in the 0.00 to 1000 NTU (Nephelometric Turbidity Units) range. The instrument has an EPA compliance reading mode which rounds the reading to meet EPA reporting requirements.

Depending on the measured sample and needed accuracy, normal measurement, continuous measurement or signal averaging measurement can be selected.

*Free or Total Chlorine measurements* can be made in the 0.00 to 5.00 mg/L (ppm) range.

With the powerful CAL CHECK™ function, the good performance of the instrument can be validated at any moment by using the exclusive Hanna ready-made, NIST traceable standards.

Calibration can be performed at any time for turbidity and for colorimetric range.

For turbidity, a two, three or four-point calibration is available using the supplied (<0.1, 15, 100 and 750 NTU adjustable calibration points) or user prepared standards. For colorimeter, a one-point calibration can be performed.

**HI 93414** has complete G.L.P. (Good Laboratory Practice) functions that allows traceability of the calibration conditions. The last calibration points, time and date can be checked by a single key touch. **HI 93414** has a user-friendly interface with an easy to read, large Liquid Cristal Display. Displayed codes guide the user step by step with routine operation and through calibration. Confirmation and error acoustic signals help the user during instrument operation.

The **HI 93414** combined meter is a truly portable instrument. It is supplied with a rigid carrying suitcase that offer protection for harsh environments. The instrument is also splash proof.

One battery set is enough for at least 1500 measurements. The battery charging percentage and low battery condition is displayed on the LCD to avoid unexpected battery failure. In addition, the instrument has an auto shut-off feature and turns off after 15 minutes of non-use to save batteries life. The instrument is equipped with backlight and the current time is displayed continuously on the LCD.

The instrument also provides a logging function. Up to 200 measurements can be stored in the internal memory and consulted at any time. In order to further store and analyse, the data can be downloaded to a PC using one of the available ports: RS232 or USB.

For advanced field applications, the **HI 93414** combined meter is equipped with Tag Identification System (TIS) that make data collecting and management simpler than ever.

## TAG IDENTIFICATION SYSTEM

Hanna is the first manufacturer of analytical instruments that has decided to add the unique T.I.S.- Tag Identification System to its meters, to meet the more restrictive needs of the users and fit all advantages of this system to the turbidity and chlorine measurements to simplify data management. The system is designed for scientific and industrial applications, or to prove during safety audits and inspections that samples have been truly taken on pre-established locations.

The system is as easy to install as to operate. Just fix the so-called iButton® tags near your sampling sites that need to be checked often, and with this the T.I.S. is setup. The tag contains a computer chip embedded in a durable stainless steel can. It is designed to withstand the harsh environments, indoors or outdoors. The number of tags that can be installed is practically unlimited, because each tag has a unique identification code.

Immediately after tags installation, data collecting can be started. Use the **HI 93414** to take measurements and memorize the test result by pressing the Log-on-Demand key. Then, the instrument will ask for the tag identification.

Simply touching the iButton® with the matching connector on the **HI 93414** does identify and authenticate logging, by storing the iButton® serial number, time and date stamp.

The power of the T.I.S. feature resides in the PC application. Download all test data to your PC and use our HI 92000 Windows® compatible application software for further data management. You can sort or filter all your collected test data on different criteria like on a specific sampling location, parameter, date and time intervals, or fix range to filter measured values. The data can be plotted in a graph, exported to other common Windows® applications or printed for reporting purposes.

It is possible to add also new tags later on, thus increasing an already existing database. Each time the PC software recognizes a new added tag, it will ask for a description of the new sampling location.

## ABBREVIATIONS

<b>NTU</b>	Nephelometric Turbidity Units	<b>RTC</b>	Real Time Clock
<b>JTU</b>	Jackson Turbidity Units	<b>RH</b>	Relative Humidity
<b>FTU</b>	Formazin Turbidity Units	<b>TIS</b>	Tag Identification System
<b>USEPA</b>	US Environmental Protection Agency	<b>ID</b>	Identification
<b>LCD</b>	Liquid Crystal Display		

iButton® is registered Trademark of "MAXIM/DALLAS semiconductor Corp."

## PRINCIPLE OF OPERATION

### TURBIDIMETER

Turbidity of water is an optical property that causes light to be scattered and absorbed, rather than transmitted. The scattering of the light that passes through a liquid is primarily caused by the suspended solids. The higher the turbidity, the greater the amount of scattered light. Because even the molecules in a very pure fluid scatter light to a certain degree, no solution will have zero turbidity.


The **USEPA Method 180.1** specify the key parameters for the optical system to measure turbidity for drinking, saline and surface water in a 0 to 40 NTU range, using the nephelometric method.

The **HI 93414** instrument is designed to meet or exceed the criteria specified by the **USEPA Method 180.1** and **Standard Method 2130 B**.

The light beam that passes through the sample is scattered in all directions. The intensity and pattern of the scattered light is affected by many variables like wavelength of the incident light, particle size, shape, refractive index and color.

The Hanna's **HI 93414** is based on a state-of-the-art optical system that guarantee both high performance and reliable results.

This optical system includes a tungsten filament lamp, a scattered light detector ( $90^\circ$ ) and a transmitted light detector ( $180^\circ$ ). For the colorimeter range the optical system is based on the turbidimeter tungsten lamp and a separate detector with a narrow band interference filter @ 525 nm to guarantee both high performance and reliable results for colorimetric measurements.

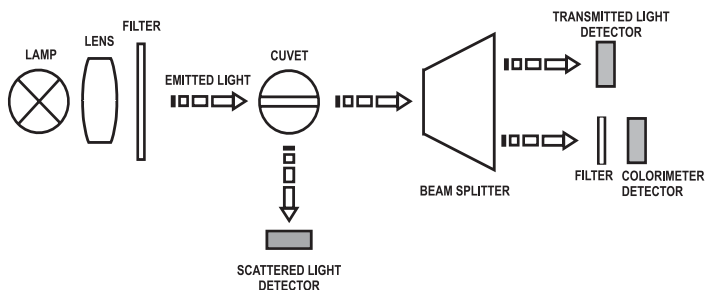

For the turbidimeter range the microprocessor of the instrument calculates from the signals that reaches the two detectors, the NTU value, using an effective algorithm. This algorithm corrects and compensates for interferences of color, making the **HI 93414** instrument color-compensated.

The optical system and measuring technique allow the compensation of lamp intensity fluctuations, minimizing the need of frequent calibration.

The lower detection limit of a turbidimeter is determined by the so called "stray light". Stray light is the light detected by the sensors, that is not caused by light scattering from suspended particles.

The optical system of **HI 93414** instrument is designed to have very low stray light, providing accurate results for low turbidity samples. However, special care must be taken when measuring low turbidities (see page 14 "General Tips for an Accurate Measurement" for sample preparation and measuring techniques).

## MEASUREMENT UNITS

Many methods were used to measure turbidity over the years. The Jackson Candle Turbidimeter was used to measure turbidity as Jackson turbidity units (JTU). The Secchi Disk is commonly used to measure turbidity in lakes and other deep waters (mg/L SiO<sub>2</sub>). Both methods are visual and are not considered very accurate. To obtain more accurate readings a nephelometer should be used as a turbidity reading instrument.

The **HI 93414** turbidimeter reports the measurements only in NTU (Nephelometric Turbidity Units). NTU units are equal to FTU units (Formazine Turbidity Units). The conversion table between these measurement units is shown below:

	JTU	NTU/FTU	SiO <sub>2</sub> (mg/L)
JTU	1	19	250
NTU/FTU	0.053	1	0.13
SiO <sub>2</sub> (mg/L)	0.4	7.5	1

## COLORIMETER

Absorption of light is a typical phenomenon of interaction between electromagnetic radiation and matter. When light beam crosses a substance, some of the radiation may be absorbed by atoms, molecules or crystal lattices.

If pure absorption occurs, the fraction of absorbed light depends both on the optical path length through the matter and on the physical-chemical characteristics of the substance, according to the Lambert-Beer law:

$$-\log \frac{I}{I_0} = \epsilon_{\lambda} c d$$

or

$$A = \epsilon_{\lambda} c d$$

Where:

- $-\log \frac{I}{I_0} =$  Absorbance (A)
- $I_0 =$  intensity of incident light beam
- $I =$  intensity of light beam after absorption
- $\epsilon_{\lambda} =$  molar extinction coefficient at wavelength  $\lambda$
- $c =$  molar concentration of the substance
- $d =$  optical path through the substance

Therefore, the concentration " $c$ " can be calculated from the absorbance of the substance as the other factors are known.


Photometric chemical analysis is based on the possibility to develop an absorbing compound from a specific chemical reaction between sample and reagents. Given that the absorption of a compound strictly depends on the wavelength of the incident light beam, a narrow spectral bandwidth should be selected as well as a proper central wavelength to optimize measurements.

The measurement process is carried out in two phases: first the instrument is zeroed and then the actual measurement is performed.




# FUNCTIONAL DESCRIPTION

## INSTRUMENT DESCRIPTION

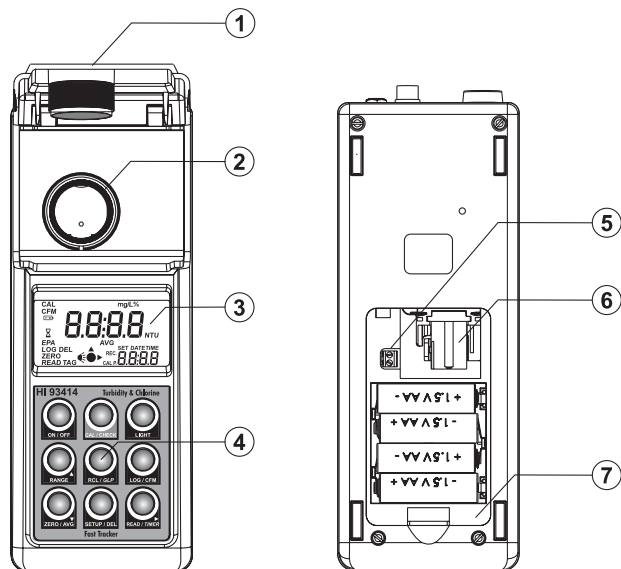


- 1) Cuvet Lid. Close the cuvet lid prior to start a measurement.
- 2) Cuvet Holder. Insert the cuvet into the holder with the cuvet mark matching the case mark.
- 3) Liquid Crystal Display (LCD). The LCD has backlight for better visibility in dark environments.
- 4) Keypad. Splash proof resistant.
- 5) Lamp connector. Connect the new lamp using a screwdriver during lamp changing procedure.
- 6) Lamp. Replaceable tungsten lamp.
- 7) Battery Lid. Remove the battery lid in order to change batteries or replace the lamp.

## KEYPAD DESCRIPTION

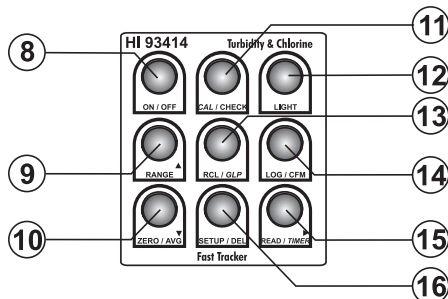


- 8) ON/OFF, press to turn the instrument ON/OFF. If no key is pressed for more than 15 minutes, the instrument automatically shuts off.
- 9) RANGE ▲, press to change the range. You can choose between turbidimeter or free or total chlorine range. In SETUP it is used to increase the set values. In Log Recall it is used to select a newer record (scroll up).
- 10) ZERO/AVG ▼, press to set the average reading mode ON/OFF in turbidimeter range. In colorimeter range it is used to make a zero reading. In SETUP it is used to decrease the set values. In Log Recall it is used to select an older record (scroll down).
- 11) CAL/CHECK, press and hold for 3 seconds to enter calibration. In colorimeter range it is used to check the calibration. In SETUP it is used to start/stop editing a parameter.
- 12) LIGHT, press to turn ON/OFF the backlight.
- 13) RCL/GLP, press to enter/exit viewing log content or press and hold for 3 seconds to enter the GLP feature.
- 14) LOG/CFM, press to save the log records. In SETUP it is used to confirm the selected option.
- 15) READ/TIMER ►, press to start a measurement. Press and hold to make a continuous measurement in turbidimeter range. In colorimeter range press for 3 seconds to start the timer for free and total chlorine measurement. In Log Recall it is used to see the content of a record. In GLP it is used to see all available informations. In SETUP, during date or time editing, it is used to move the focus on the next setting item.
- 16) SETUP/DEL, press to enter/exit SETUP. The DEL function is available in Log Recall to delete calibration or one/all records. In GLP it is used to delete the user calibration.

## CONNECTORS DESCRIPTION

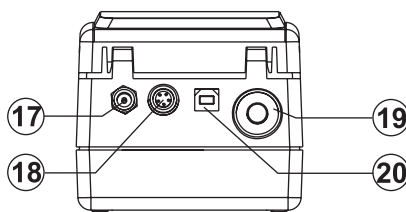

- 17) AC adapter connector, used to connect an external AC Adapter.
- 18) RS232 connector, used to transfer data through the RS232 connection. Use **HI 920011** serial cable to connect to the PC.
- 19) Tag reader connector. Touch the tag with the connector to read the location identification number during logging.
- 20) USB connector, used to transfer data to the PC.

## DISPLAY DESCRIPTION

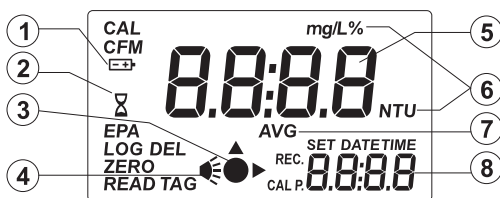

- 1) Battery icon. When the instrument is powered by batteries, at the start of the instrument, the remaining battery life is displayed along with the battery icon. When blinking, the batteries are almost empty and need to be replaced.
- 2) Wait icon. It is displayed along with the timer countdown in colorimeter range.
- 3) Measurement icon. The icon shows the measuring scheme of the instrument.
- 4) Lamp icon. The lamp icon is shown when the lamp is turned on.
- 5) Four digit main display. The main display shows the measured value after one measurement. Depending on the instrument working mode, other values or messages are displayed.
- 6) Measurement units. The turbidity is measured in NTU. When average mode or continuous mode is selected, the NTU tag blinks at each new displayed value. For conversions in other units see "Measurement Units" section on page 7. Free & Total Chlorine are measured in mg/L; % is used to display the remaining batteries life.
- 7) AVG icon. When selected, in turbidimeter range only, the measurement will be made in average mode. The NTU tag blinks at each new displayed value.
- 8) Four digit secondary display. The secondary display shows the current time (if selected), if not selected "turb", "F Cl" or "t Cl" is displayed indicating the momentarily range. It can display other values/messages.

## BEEPER

A beeper is used to make the user interface more friendly. An error or invalid key press is signaled by a long beep. A confirmation beep is signaled by a short beep. The beeper is selectable as ON or OFF in SETUP menu.

## SPECIFICATIONS

### *Turbidity*

Range	0.00 to 9.99; 10.0 to 99.9 and 100 to 1000 NTU
Range selection	Automatically
Resolution	0.01 NTU from 0.00 to 9.99 NTU; 0.1 NTU from 10.0 to 99.9 NTU; 1 NTU from 100 to 1000 NTU
Accuracy	±2% of reading plus 0.02 NTU
Repeatability	±1% of reading or 0.02 NTU, whichever is greater
Stray Light	< 0.02 NTU
Typical EMC Deviation	±0.05 NTU
Light Detector	Silicon Photocell
Method	Ratio Nephelometric Method (90°), ratio of scatter and transmitted light; Adaptation of the <b>USEPA Method 108.1</b> and <b>Standard Method 2130 B</b> .
Measuring mode	Normal, Average, Continuous.
Turbidity Standards	<0.1, 15, 100 and 750 NTU
Calibration	Two, three or four-point calibration

### *Free and total Chlorine*

Range Free Cl <sub>2</sub>	0.00 to 5.00 mg/L
Total Cl <sub>2</sub>	0.00 to 5.00 mg/L
Resolution	0.01 mg/L from 0.00 to 3.50 mg/L; 0.10 above 3.50 mg/L
Accuracy	±0.02 mg/L @ 1.00 mg/L
Typical EMC Deviation	±0.02 mg/L
Detector	Silicon photocell with 525 nm narrow band interference filters
Method	Adaptation of the <b>USEPA Method 330.5</b> and <b>Standard Method 4500-Cl G</b> . The reaction between chlorine and DPD reagent causes a pink tint in the sample.
Standards	1 mg/L free chlorine, 1 mg/L total chlorine
Calibration	One-point calibration

### ***Other***

<b>Light Source</b>	Tungsten filament lamp
<b>Lamp life</b>	greater than 100,000 readings
<b>Display</b>	60 x 90mm LCD with backlight
<b>LOG Memory</b>	200 records
<b>Serial Interface</b>	RS232 or USB 1.1
<b>Environment</b>	to 50°C (122°F); max 95% RH non-condensing
<b>Power supply</b>	4 x 1.5V AA alkaline batteries or AC adapter
<b>Auto Shut-off</b>	After 15 minutes of non-use
<b>Dimensions</b>	224 x 87 x 77 mm (8.8 x 3.4 x 3.0")
<b>Weight</b>	512g (18 oz.)

## GENERAL TIPS FOR AN ACCURATE MEASUREMENT

HI 93414 is a highly accurate combined meter for some very important drinking water parameters: turbidity and free & total chlorine. To meet the instrument's performance and fully benefit of its features, it is very important for the analyst to use proper measurement techniques for accurate, precise and repeatable readings. Special care must be taken during sample preparation and handling. The instructions listed below should be carefully followed during measuring and calibration to ensure best accuracy.

### CUVET

The cuvet is part of the optical system in all measurements. The light reaches the sample by passing through the cuvet glass. As a result, the measurement can be affected by the glass imperfections, dirt, dust, scratches, or fingerprints present on the cuvet surface. So, special care must be taken in preparing and handling the cuvet.

**Note:** In colorimetric measurements, when it is possible use the same cuvet both for zeroing and measurement. If this is not possible always match the cuvet.

Also, in turbidimetric measurements, if you are using multiple cuvet, always match the cuvet.


### *CUVET HANDLING*

The cuvet should be free of scratches or cracks. Any cuvet with visible scratches will be discarded. The cuvet should be periodically washed with acid. After washing, the cuvet should be well rinsed multiple times with distilled or deionized water. Allow cuvet to air-dry and store them for long periods of time with caps, to avoid dirt entering inside. Always handle the cuvet by touching only the cap or its top side (over the horizontal line).


Always store the cuvet in separate boxes or with separators between them to avoid scratches on the surface.

### *CUVET PREPARATION*

Whenever a cuvet is used, it must be clean inside and outside. When it is placed into the instrument, it must be dry outside, completely free of fingerprints or dirt.

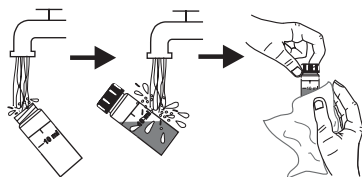

If the cuvet is not indexed, put the cuvet with the factory mark aligned with the sign on the instrument top.

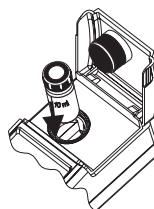

### *CUVET OILING (TURBIDITY only)*


**Warning:** For colorimetric measurements the cuvet should be completely free of any trace of oil. Do not use the oiling procedure for colorimetric measurements.

To hide minor imperfections and scratches, the cuvetts should be oiled outside with the supplied silicone oil. This is very important, especially for low turbidity samples ( $< 1$  NTU), otherwise scratches can contribute and alter turbidity readings.

The silicone oil has the same refractive index as the glass and will not alter the turbidity readings. It is important to apply only a thin layer of silicone oil.

**Warning:** Do not apply silicone oil in excess because it may retain dirt or contaminate the cuvet holder of the instrument, altering the turbidity readings.

It is very important to apply the silicone oil on a clean, dry cuvet. Apply a few drops of oil and wipe the cuvet thoroughly with a lint-free cloth. Wipe off the excess oil till you obtain a thin, uniform layer. If the procedure is correctly followed, the cuvet should appear nearly dry with no visible oil.

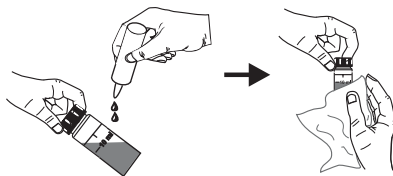

**Note:** The supplied cloth for oiling should be stored together with the silicone oil bottle and cuvetts, taking care to avoid contamination with dirt. After a few oiling procedures, the cloth will contain enough oil to wipe the bottle with it without adding more oil. From time to time add some drops of oil on the cuvet to provide the necessary oil quantity in the cloth.

### *INDEXING A CUVET*

It is very important for low turbidity readings to always insert the cuvet into the instrument in the same position.

All cuvetts are factory indexed. This index can be used to put the cuvet with the factory mark on the cuvet aligned with the sign on the instrument top.


To further reduce the effect of glass imperfections, the cuvet can be indexed and use this new index as the position mark.

For indexing one cuvet or matching multiple cuvetts, the continuous reading mode is suggested. In this mode, if READ/TIMER ► is kept pressed, multiple successive readings are taken without turning off the lamp. After first reading is displayed, it is possible to open the cuvet lid and rotate the cuvet without generating an error condition. The turbidity is immediately displayed, reducing considerably the measurement time. The lamp of the instrument will turn off only when READ/TIMER ► is released.


**Note:** The instrument can not perform continuous readings if the average mode is on.

In order to index a cuvet follow the next steps:

- Fill the cuvet with high quality water ( $<0.1$  NTU) up to the 10 mL mark.

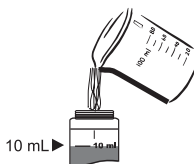


- Clean and oil the cuvet as described before.

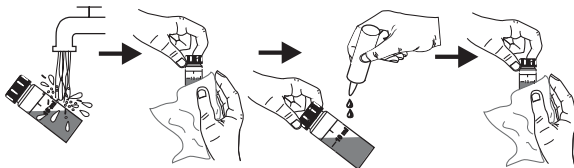


- Turn the instrument ON.




- Insert the cuvet into the instrument and press READ/TIMER ►. Record the reading.

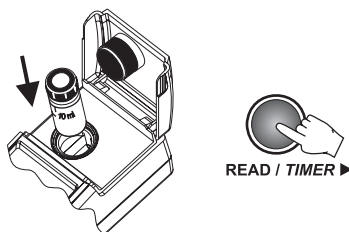

- Open the instrument lid, slightly rotate the cuvet and take a new reading.

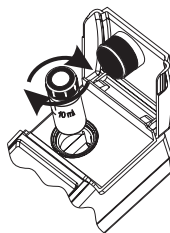

- Repeat the last step until you read the lowest NTU value. Alternatively, keep the READ/TIMER ► pressed and, after the first value is displayed, open the lid and start rotating the cuvet until the lowest NTU value is displayed.
- Mark this position on the thicker white band on the top of the cuvet with a water resistant pencil.
- Always use this position to align it with the sign on the instrument top.

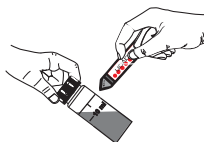



## MATCHING MULTIPLE CUVETS


Precise measurements require the use of a single cuvet. If it is not possible, cuvet selection and matching must be performed before taking measurements.

In order to match multiple cuvetts follow the next steps:

- Fill some cuvetts with high quality water ( $<0.1\text{NTU}$ ) up to the 10 mL mark.




- Clean and oil the cuvetts as described before.

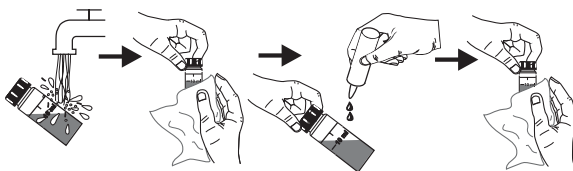

- Turn the instrument ON.




- Insert the first cuvet into the instrument and press READ/TIMER ►. Record the reading.

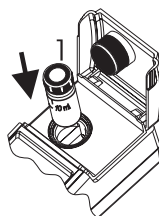


- Record the position of the cuvet and the displayed reading.


- Mark this position on the thicker white band on the top of the cuvet with a water resistant pencil.

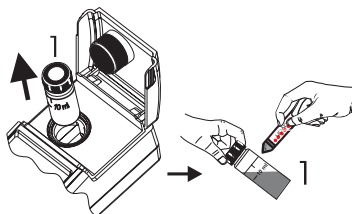

- Insert the second cuvet into the instrument and take a reading.

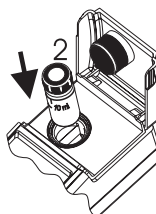

- Open the instrument lid, slightly rotate the cuvet and take a new reading.

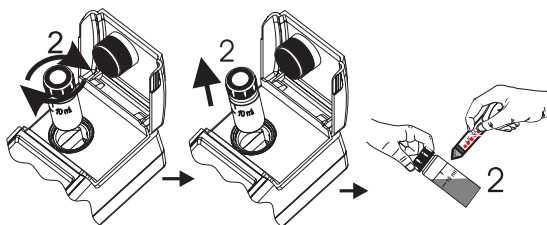

- Repeat the last step for the second cuvet until the reading is within 0.01 NTU of the value obtained for the first cuvet.
- Alternatively, keep the READ/TIMER ► pressed and, after the first value is displayed, open the lid and start rotating the cuvet until the read value matches the first cuvet.
- Mark this position on the second cuvet with a water resistant pencil.
- Follow the same procedure for all the cuvetts you need.

**Note:** If the cuvet is indexed, use the index to position it in the instrument.

## **SAMPLING TECHNIQUE**

When taking turbidity measurements it is very important to select a representative sample. For consistent results, follow the next tips when sampling:

- Gently mix the water before taking the sample.
- If the sample is taken from a pipe, discard the first few liters.
- If measuring a non uniform source, collect samples from different places and mix them.

When measuring the collected sample, keep in mind the following:

- Samples should be analyzed immediately after collection because the turbidity can change in time.
- To avoid dilution of the sample it is better to rinse the cuvet with a quantity of sample and then discard. Only after this you can fill the cuvet with sample.
- Pay attention that cold samples do not condense on the sample cell.

## **REMOVING AIR BUBBLES (TURBIDITY only)**

Any air bubbles present in the sample will cause high turbidity readings. To obtain accurate measurements, remove the air bubbles using one of these methods:

- Application of a partial vacuum;
- Addition of a surfactant, such as Triton X-100;
- Use of an ultrasonic bath;
- Heating the sample.

Sometimes it is necessary to combine two or more methods for efficient air bubble removal.

**Note:** Each method can alter the sample turbidity, if misused, so they have to be used with caution.

### *APPLICATION OF VACUUM*

Vacuum works by decreasing the atmospheric pressure. In this way the bubbles from the solution came out to the surface.

Application of vacuum is a very simple procedure and can be applied with any vacuum source at hand. The simplest equipment at hand is a syringe and a rubber stopper for vacuum degassing.

- Notes:**
- Pay attention that the vacuum equipment be clean and oil-free.
  - It is not recommended to apply vacuum to a viscous sample that contains volatile components. In such cases the vacuum can determine the volatile component of the viscous sample to increase the bubbles from the sample.

### *ADDITION OF SURFACTANT*

Surfactant addition works by changing the surface tension of the water. In this way bubbles are released from the sample. This method is effective in samples that are supersaturated with air.

The procedure consists in the addition of a drop of surfactant in the cuvet before adding the sample to be analyzed.

A convenient surfactant to use for degassing is Triton X-100.

**Warning:** Pay attention that changing the surface tension will cause a rapid settling of particles that cause turbidity. To avoid this problem, analyze as soon as possible the sample.

Do not shake vigorously the sample because the surfactant may foam. If you are using the same cuvet, rinse it before adding a new sample in order to avoid surfactant accumulation.

Surfactant contribution to the turbidity readings is negligible.

**Note:** Surfactant addition should be used for degassing only when other methods are ineffective.

### *USE OF AN ULTRASONIC BATH*

The ultrasonic waves are very effective in removing air bubbles from samples. However, ultrasonic waves should be used with care because they can alter sample turbidity characteristics, by modifying the shape and size of particles which cause turbidity. The ultrasonic waves can also break the existing air bubbles, leading to a complication of the degassing process.

In order to avoid excess application of the ultrasonic waves you can apply ultrasound until all visible air bubbles are removed, and then measure the sample turbidity. This is the most used procedure for degassing.

If you are not sure that all air bubbles were removed, apply ultrasonic waves again for a short period of time and then measure the turbidity. Repeat this procedure until the turbidity is increasing instead of decreasing, sign that turbidity of the sample was altered.

In order to degas a sample fill a clean cuvet with sample and immerse it ( $1/2$  to  $2/3$  immersed) in an ultrasonic bath. Follow the degassing procedure described above. Only after the degassing procedure is finished the cuvet can be capped.

## HEATING THE SAMPLE

Use of heat to remove air bubbles, although very effective in some cases, should be handled with care because it can alter the turbidity of the sample. When heating a sample, the volatile components from the sample can vaporize, the suspended components can dissolve or the sample characteristics can change.

Therefore, the heating procedure should be used with extreme care.


The best way is to use a warm water bath and immerse the cuvet with sample into the bath. Heat the sample only until the visible bubbles are removed.

**Note:** Always cool the heated sample to the original sample temperature before measurement.


The heating procedure can be used in combination with vacuum or ultrasonic waves application for a more effective air bubble removal.

## REAGENT ADDING (COLORIMETRY only)

- Because the reagent quantity is set up to react with 10mL of sample is very important to fill the cuvet correctly. The liquid in the cuvet forms a convexity on the top; the bottom of this convexity must be at the same level with the 10 mL mark.

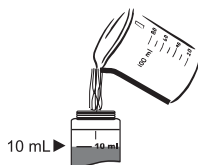

- To open the powder reagent pack:
  - use scissors to open the powder packet
  - push the edges of the packet to form a spout
  - pour the content of the packet

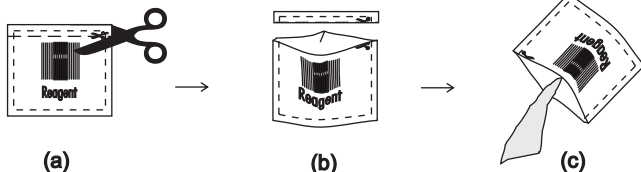

- Do not let the reacted sample to stand too long after reagent is added or accuracy will be lost.
- All the reaction times reported in this manual are referred to 20°C (68°F). As a general rule of thumb, they should be doubled at 10°C (50°F) and halved at 30°C (86°F).
- Insert the cuvet with the mark aligned with the mark on the instrument top.
- It is possible to take multiple readings in a row but it is recommended to take a new zero reading for each sample and to use the same cuvet for zeroing and measurement.
- After the reading it is important to discard immediately the sample, otherwise the glass might become permanently stained.

**Note:** In order to maximize accuracy, prior to a measurement follow the **validation procedure**, to be sure that the instrument is properly calibrated. If necessary, calibrate the instrument.

## RANGE SELECTION

The **HI 93414** instrument has three measurement ranges:

- Turbidity from 0.00 to 1000 NTU
- Free chlorine from 0.00 to 5.00 mg/L
- Total chlorine from 0.00 to 5.00 mg/L




At startup, the instrument shows for one second the range on the LCD.

The startup range is the last one used before turning off the instrument.



Before taking measurements check that the instrument is in the correct range or switch it to the correct one.

- To switch between the existing ranges press **RANGE ▲**.


The selected range will be briefly displayed on the primary LCD and the instrument will enter in the new range. The selection is circular, the total chlorine range is followed by the turbidity range.

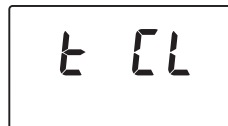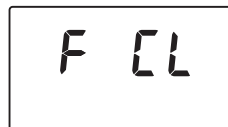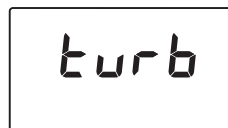

- If the current time is hidden, the selected range is displayed on the secondary LCD as "turb", "F Cl" or "t Cl".

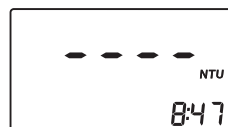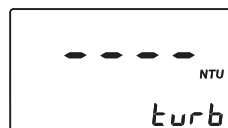

- If the current time is displayed on the LCD a range indication are the measuring units. For free and total chlorine the units are mg/L and for turbidity the units are NTU. In this case, when taking measurements or calibrating the instrument, on the secondary LCD the parameter is displayed as "turb", "F Cl" or "t Cl".

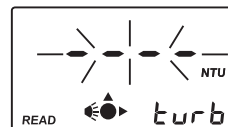

## MEASUREMENT PROCEDURE

When taking turbidity, free or total chlorine measurements, several basic rules should be followed:


- Always use cuvetts without scratches or cracks because they can cause inaccurate readings.
- Always cap the cuvetts to avoid spillage of the sample into the instrument.
- Always close the lid of the instrument during measurement.
- Keep the lid of the instrument closed when it is not used to prevent dust or dirt entering.
- Always put the instrument on a flat, rugged surface when taking measurements.
- Do not operate in direct sunlight.
- Do not use too much oil to prevent contamination of the optical system (for turbidimeter range only).

### TURBIDITY MEASUREMENTS


To take turbidity measurements, follow the next steps:

- Turn the instrument ON by pressing ON/OFF.

When dashes are displayed on the LCD, the instrument is ready. The current time appears on the secondary LCD, if selected in SETUP menu or “turb” if the time is not displayed.

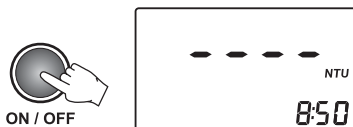


- Fill a clean, dry cuvet with 10 mL of sample up to the mark, taking care to handle the cuvet by the top.
- Replace the cap.
- Wipe the cuvet thoroughly with a lint-free cloth to remove any fingerprints, dirt or water spots.
- Apply silicone oil on the cuvet and wipe with a lint-free cloth to obtain an even film over the entire surface of the cuvet.

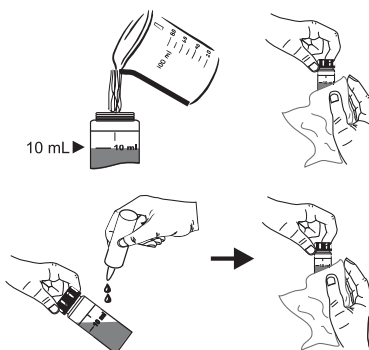

**Note:** It is very important to oil the cuvet, especially for low turbidity values ( $< 1$  NTU) to hide the glass imperfections which can influence the reading.

- Place the cuvet into the instrument. Align the mark from the cuvet with the sign on the instrument top and close the lid.

**Note:** If you have a cuvet with orientation mark, place the cuvet into the instrument with the orientation mark aligned with the sign on the instrument top.

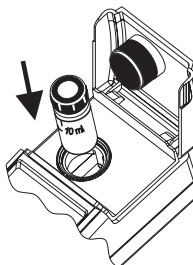


## NORMAL MEASUREMENT

This type of measurement can be used for regular readings, when the sample is stable and normal accuracy is required. In normal measurement mode, the lamp is ON for a minimum period of time (about 7 seconds), saving the battery life. Normal measurement takes about 10 seconds.


If normal measurement is selected, the "AVG" tag will not be displayed.

- Press READ/TIMER ► to start the measurement.

The display will show blinking dashes and the icons for cuvet, detectors and lamp will appear during measurement.

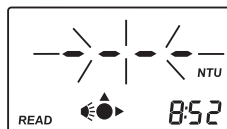

At the end of the measurement, the instrument directly displays turbidity in NTU.

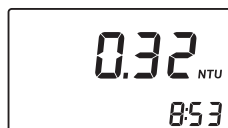

## CONTINUOUS MEASUREMENT

This measurement mode can be used when many measurements have to be taken in a short period of time. The feature is also useful to evaluate a very fast settling sample. This measurement mode is recommended for indexing cuvetts. After the first reading is taken, the lid opening will not generate any errors.

The first value is displayed after about 10 seconds and then a new reading is displayed each second. In order to take a continuous measurement keep READ/TIMER ► pressed until the desired number of measurements are taken. The display will show blinking dashes and the icons for cuvet, detectors and lamp will appear. When a new value is displayed, the cuvet icon and the measurement unit will briefly blink.

The last value remains on the display after the READ/TIMER ► is released.


## AVERAGED MEASUREMENT

Select this measurement mode when samples that cause unstable readings are analyzed. By averaging several readings, the random noise generated by the sample is reduced and accurate measurements can be taken.


This mode can also be selected when high accuracy measurements are desired. In the average mode 10 measurements are averaged in a short period of time (about 20 seconds). The initial value is displayed after 10 seconds and the display is updated every second with an intermediate value.

- To select the averaged measurement mode, press ZERO/AVG ▼.

When this mode is selected, the AVG icon will be displayed on the LCD.

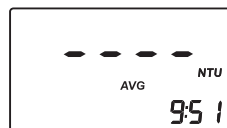


- Press READ/TIMER ► to start the average reading. The display will show blinking dashes and the icons for cuvet, detectors and lamp will appear during measurement. When a new intermediate value is displayed, the cuvet icon and the measurement unit will briefly blink. When the measurement is ended, the final averaged result is displayed directly in NTU.

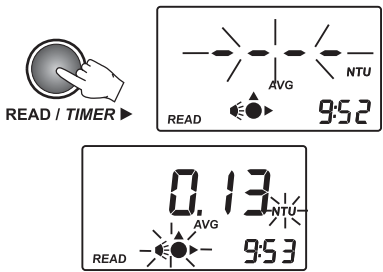

### RANGE AND UNITS

**HI 93414** automatically selects the correct turbidity range to display the results with the highest accuracy. If the measured value is higher than 1000 NTU (over range), the display will show the maximum value blinking.

The instrument has an EPA compliance reading mode. If this feature is activated in SETUP, “EPA” tag will appear on the LCD and the readings will be rounded to meet EPA reporting requirements as shown in the table.

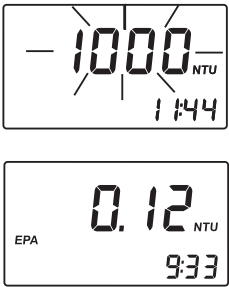

NTU	Record to Nearest
0.0-1.0	0.05
1-10	0.1
10-40	1
40-100	5
100-400	10
400-1000	50
> 1000	100




## FREE AND TOTAL CHLORINE MEASUREMENT

To take colorimetric measurements follow next steps:

- Turn the instrument on by pressing ON/OFF.  
Assure that the correct range is selected by paying attention to the startup message or to the measuring units.



When dashes are displayed on the LCD, the instrument is ready. The current time appears on the secondary LCD, if selected in SETUP menu, or "F Cl" or "t Cl" if the time is not displayed.

The "ZERO" tag will blink suggesting that a zero measurement should be done.

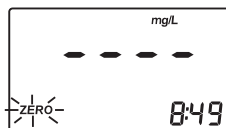



### ZEROING THE INSTRUMENT

- Fill a clean, dry cuvet with 10 mL of sample, up to the mark, taking care to handle the cuvet by the top. Replace the cap.
- Wipe the cuvet thoroughly with a lint-free cloth to remove any fingerprints, dirt or water spots.
- Place the cuvet into the instrument. Align the mark on the cuvette with the sign on the instrument top and close the lid.

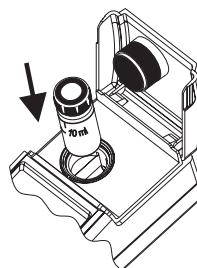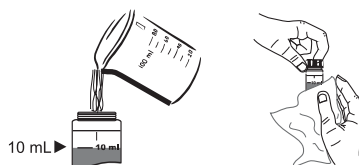

**Note:** If you have a cuvet with orientation mark place the cuvette with the orientation mark aligned with the sign on the instrument top.

- Press ZERO/AVG ▼. The dashes will blink on the primary LCD. If the zeroing procedure was successful, the display will show "-0.0-".

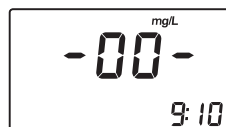
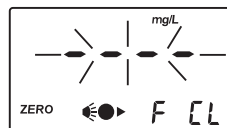


## SINGLE SAMPLE READ

- Remove the cuvet from the instrument.
- Remove the cap.
- Add the content of one packet of the specific test reagent, for:

Free Chlorine		Total Chlorine
1 packet of <b>HI 93701-0</b>	or	1 packet of <b>HI 93711-0</b>

- Replace the cap and shake gently for 20 seconds (or 2 minutes in case of seawater analysis).
- Replace the cuvet into the holder and ensure that the mark on the glass is matched with the mark on the instrument top. Close the lid.
- Hold READ/TIMER ► for 3 seconds. The display will show the hourglass blinking and the countdown prior to measurement.  
Alternatively wait for:

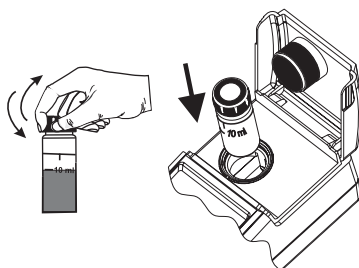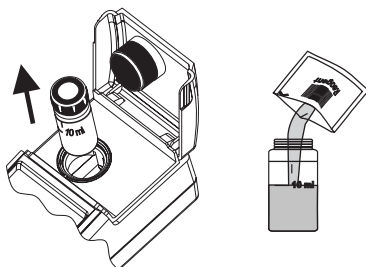



or



In both cases blinking dashes will appear during measurement.


The instrument directly displays the concentration in mg/L of free or total chlorine.

**Note:** If the value is over range, the maximum value (5.00 mg/L) will blink.

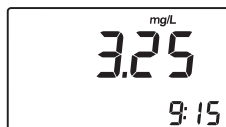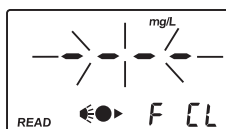

## MULTIPLE SAMPLES READ

- Place the second cuvet with the reacted sample into the holder and ensure that the mark on the glass is matched with the mark on the instrument top.

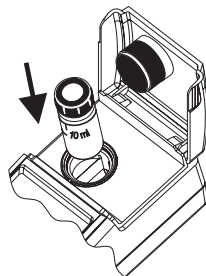


- Hold READ/TIMER ► for 3 seconds. The display will show the hourglass blinking and the countdown prior to measurement. Alternatively wait for:



Free Chlorine      Total Chlorine  
1 minute      or    2 minutes and 30 seconds

and then just press READ/TIMER ►.



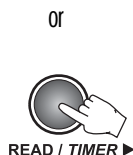


In both cases blinking dashes will appear during measurement.

The instrument directly displays the concentration in mg/L of free or total chlorine.

**Note:** It is recommended to make a zero before each measurement.

**Note:** If the signal to noise ratio is too high, the zero value will blink.

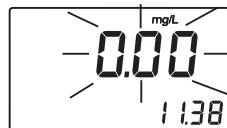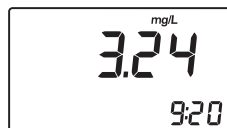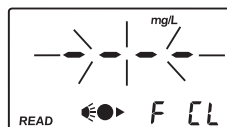

## INTERFERENCES

The colorimetric measurements are affected by the following interfering agents:

- Bromine (positive error).
- Chlorine dioxide (positive error).
- Iodine (positive error).
- Oxidized Manganese and Chromium (positive error).
- Alkalinity above 250 mg/L  $\text{CaCO}_3$  or acidity above 150 mg/L  $\text{CaCO}_3$  will not reliably develop the full amount of color or it may rapidly fade. To resolve this, neutralize the sample with diluted HCl or NaOH.
- In case of water with hardness greater than 500 mg/L  $\text{CaCO}_3$ , shake the sample for approximately 2 minutes after adding the powder reagent.

## CALIBRATION PROCEDURE

### TURBIDIMETER CALIBRATION

HI 93414 has a powerful calibration function that compensates for lamp aging or changing. The calibration can be done using the supplied calibration solutions or user prepared standards.

HI 93414 turbidimeter is supplied with 4 AMCO standards — <0.1 NTU, 15 NTU, 100 NTU and 750 NTU. The Hanna standards are specially designed for this instrument. Turbidity standards have a shelf life and should not be used after the expiration date.

Alternatively, formazin standards can be used. It is recommended that the turbidity value of the prepared calibration solutions to be close to the default calibration points.

The first calibration point should be near 0 NTU, the second point can be chosen between 10 and 20 NTU, the third point between 50 and 150 NTU and the fourth point between 600 and 900 NTU.

### FORMAZIN PREPARATION

In order to prepare formazin 4000 NTU stock solution, follow the next procedure:

*Solution I* : Dissolve 1.000 grams of hydrazine sulfate,  $(\text{NH}_2)_2 \text{H}_2\text{SO}_4$ , in distilled, deionized water and dilute to 100 mL in a volumetric flask.

**Warning:** Handle hydrazine sulfate with care because it is a carcinogen reagent. Avoid inhalation, ingestion, or skin contact.

Formazin solution can also contain some hydrazine traces.

*Solution II* : Dissolve 10.000 grams of hexamethylenetetramine,  $(\text{CH}_2)_6\text{N}_4$ , in distilled, deionized water and dilute to 100 mL in a volumetric flask.

*Stock solution:* Mix 10 mL Solution I and 10 mL Solution II in a flask. Let the stock solution stays 48 hours at  $25 \pm 3^\circ\text{C}$  ( $77 \pm 5^\circ\text{F}$ ). This will result in a 4000 NTU formazin suspension. It is very important for the formation of the formazin polymer to maintain the same temperature.

The stock solution (4000 NTU) can be stored up to one year in proper conditions. Store formazin in amber glass bottle or any UV-light blocking bottle.

To obtain a high quality formazin always use pure reagents and high-purity water.

To prepare the calibration standards, dilute the stock solution with the same high-purity water you used for the preparation of the stock solution.

The diluted formazin solutions are not stable. They should be used immediately after preparation and discard immediately after use.

### CALIBRATION


For best results, the measurement techniques must be followed during calibration. If formazin standards are used, mix the cuvetts gently for about 1 minute and then allow the standard to settle for 1 more minute before calibration.

Calibration can be performed in two, three or four points. It is possible to interrupt calibration procedure at any time by pressing CAL/CHECK or ON/OFF.


**Note:** Calibration of the turbidity range will not affect the free or total chlorine measurements.

## TWO-POINT CALIBRATION

- Turn the instrument ON by pressing ON/OFF. If you are not in turbidity range, first select the range. If you are in turbidity range, when dashes are displayed on the LCD, the instrument is ready. The current time appears on the secondary LCD, if selected in SETUP menu or "turb", if the time is not displayed.

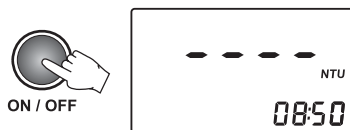

- Enter calibration mode by pressing CAL/CHECK for 3 seconds. The display shows "CAL P.1" on the secondary LCD and no suggested value and "READ" tag will blink.

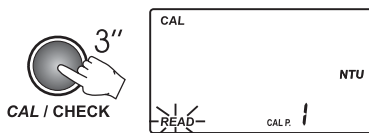


- If the prepared formazin is used, edit the displayed value by pressing UP or DOWN keys until the display shows the correct value.




- Place the <0.1 NTU standard cuvet (or the prepared one) into the holder and ensure that the cuvet mark is aligned with the sign on the instrument top.


**Note:** Alternatively, press CFM to skip the first calibration point.

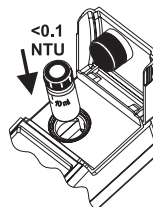

- Close the lid and press READ/TIMER. The display will show blinking dashes and the icons for cuvet, detectors and lamp will appear during measurement.

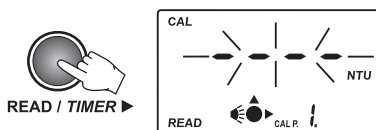


- At the end of the measurement, the second calibration point (15 NTU) is displayed on the primary LCD and "CAL P.2" on the secondary LCD, and "READ" tag will blink.

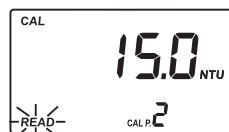


- Remove the first standard cuvet.


- Place the 15 NTU standard cuvet (or the second prepared standard) into the holder, with the cuvet mark aligned with the sign on the instrument top.

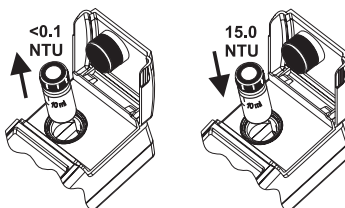

- Close the lid and press READ/TIMER ►. The display will show blinking dashes and the icons for cuvet, detectors and lamp will appear during measurement.

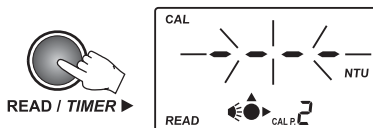

- At the end of the measurement, the third calibration point (100 NTU) is displayed on the primary LCD and "CAL P.3" on the secondary LCD and "READ" tag will blink.

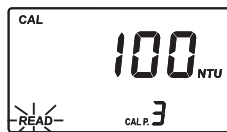


- At this moment it is possible to exit calibration by pressing CAL/CHECK. The instrument will memorize the two-point calibration data and will return to measurement mode.




### THREE-POINT CALIBRATION

To perform a three-point calibration, continue the procedure with the following steps:


- Remove the second standard cuvet.
- Place the 100 NTU standard cuvet (or the third prepared formazin standard) into the holder, with the cuvet mark aligned with the sign on the instrument top.

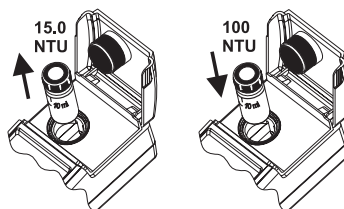


- Close the lid and press READ/TIMER ►. The display will show blinking dashes and the icons for cuvet, detectors and lamp will appear during measurement.

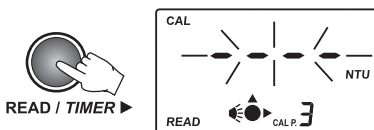

- At the end of the measurement, the fourth calibration point (750 NTU) is displayed on the primary LCD and "CAL P.4" on the secondary LCD and "READ" tag will blink.

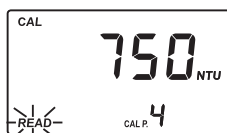




- At this moment it is possible to exit calibration by pressing CAL/CHECK. The instrument will memorize the three-point calibration data and will return to measurement mode.



## FOUR-POINT CALIBRATION

To perform a four-point calibration, continue the procedure with the following steps:


- Remove the third standard cuvet.
- Place the 750 NTU standard cuvet (or the fourth prepared formazin standard) into the holder, with the cuvet mark aligned with the sign on the instrument top.
- Close the lid and press READ/TIMER ►. The display will show blinking dashes and the icons for cuvet, detectors and lamp will appear during measurement.
- At the end of the measurement, the four-point calibration is completed and the instrument returns automatically to measurement mode.

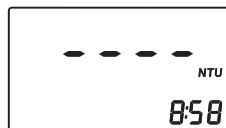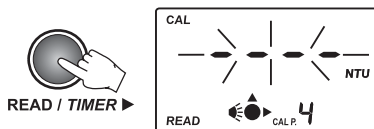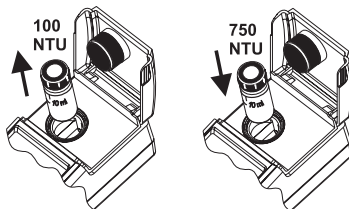

## OUT CAL RANGE FUNCTION



The instrument has an **Out Cal Range** function to prevent taking measurements in a range where the calibration do not assure the best results. The range where the calibration assures correct measurements is up to 40 NTU for a two-point calibration and up to 150% of the third point value for a three-point calibration.

The display will show a blinking “CAL” tag each time the measurements are taken outside the calibration range.

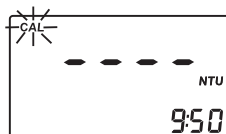


## CALIBRATION ERROR MESSAGES

- If the value of the standard read during the calibration is too far from the set value, the instrument will display “-LO-” or “-HI-” error messages. Check if the correct standard is used or prepare a fresh standard, if formazine is used, and repeat the reading of the standard.

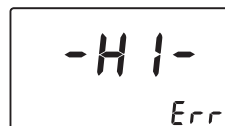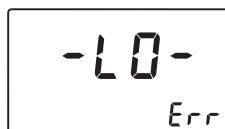

- If the calculated calibration coefficients are outside a certain range the "CAL Err" message is displayed.

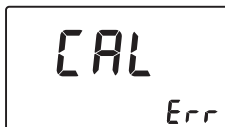

## CALIBRATION DELETION

HI 93414 is factory calibrated. It is possible to restore factory calibration by deleting the last performed calibration.

To delete last calibration, follow the next steps:

- Enter the GLP feature by pressing RCL/GLP for three seconds.


The date of the last calibration will be displayed on the LCD.



- Press READ/TIMER ► to see the information related to calibration. The last panel is the one with delete calibration.



- Press SETUP/DEL to delete the current calibration. The instrument will display "del done" for a second and the calibration is deleted, then the instrument will automatically return to measurement mode.

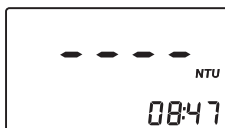



## COLORIMETER CALIBRATION

The **HI 93414** free and total chlorine colorimeter has a powerful **CAL CHECK** function that allows the user to check the instrument calibration against a NIST traceable standard before making a set of measurements. With the same standard, the instrument could be re-calibrated, if necessary.

**Note:** Free and total chlorine must be calibrated separately. Calibration of one range will not calibrate the other range.

### VALIDATION PROCEDURE

**Warning:** Do not validate or calibrate the instrument with standard solutions other than Hanna **CAL CHECK™** Standards, otherwise erroneous results will be obtained. For accurate validation and calibration please perform test at room temperature, 18 to 25°C (64.5 to 77.0°F).

- Turn the instrument on by pressing ON/OFF.  
Make sure that the instrument is in the free or total chlorine range (the desired one).





ON / OFF


- Press RANGE ▲ to select the desired range (free or total chlorine). When dashes appear on the LCD, the instrument is ready. The “ZERO” tag will blink on the LCD.



RANGE ▲

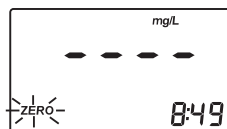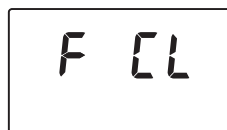



- Place the zero cuvet (A) in the instrument with the mark aligned with the mark on the instrument top.

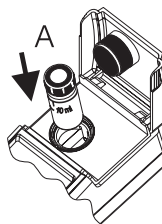


- Close the lid and press ZERO/AVG ▼. The LCD will display blinking dashes and the measuring icon during zero measurement.  
At the end of zero measurement the “-0.0-” is displayed. The meter is now ready for validation.




ZERO / AVG ▼

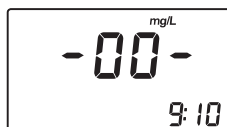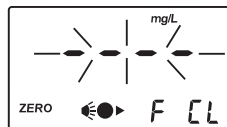

- Remove the cuvet.
- Place the CAL CHECK™ Standard cuvet B into the holder. Make sure that the mark on the glass is aligned with the mark on the instrument top.

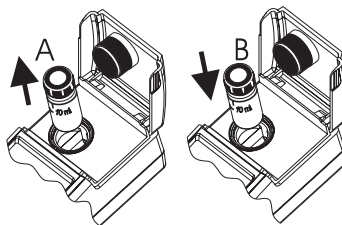

- Press CAL/CHECK. The LCD will display blinking dashes and the measuring icon during check measurement. After a few seconds the display will show the validation standard value.

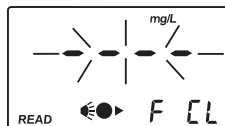



**Note:** The reading should be within specifications as reported on the CAL CHECK™ Standard Certificate. If the value is found out of specifications, please check that the cuvettes are free of fingerprints, oil or dirt and repeat validation. If results are still out of specifications, then recalibrate the instrument.

## CALIBRATION PROCEDURE

To calibrate the free or total chlorine range of the **HI 93414** the provided standard solution must be used. Do not calibrate the instrument with standard solutions other than Hanna CAL CHECK™ Standards, otherwise erroneous results will be obtained. For accurate calibration please perform test at room temperature, 18 to 25°C (64.5 to 77.0°F).


To calibrate one range follow next steps:

- Turn the instrument ON by pressing ON/OFF. Make sure that the instrument is in the free or total chlorine range (the one you want to use).
- Press RANGE ▲ to select the desired range (free or total chlorine). When dashes appear on the LCD, the instrument is ready. The current time will be displayed on the secondary LCD, if selected in SETUP menu. If not, "F CL" or "t Cl" will be displayed, depending on the selected range. The "ZERO" tag will blink on the LCD.

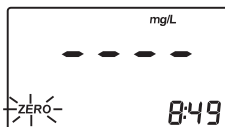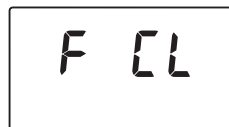


- Press and hold CAL/CHECK for 3 seconds to enter calibration.


The LCD will show "CAL" and the parameter for which the calibration is performed.

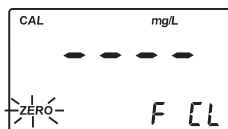


- Place the CAL CHECK™ Standard Cuvet A into the holder and ensure that the mark on the cuvet is aligned with the mark on the instrument top.

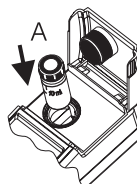

- Close the lid and press ZERO/AVG ▼.
- The LCD will display blinking dashes and the measuring icon during zero measurement.
- At the end of the zero measurement, "-0.0-" is displayed.

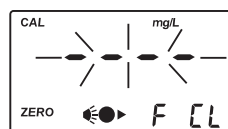


The "READ" tag will blink.

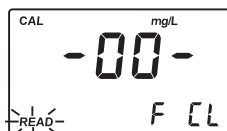


- Remove the cuvet.



- Place the CAL CHECK™ Standard Cuvet B into the holder. Make sure that the mark on the cuvet is aligned with the mark on the instrument top.

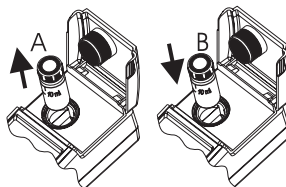


- Close the lid and press READ/TIMER ►.
- The instrument will show blinking dashes and the measuring icon during measurement.

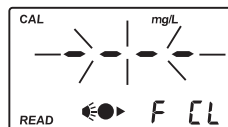

At the end, the value of the CAL CHECK™ standard value (1.00 mg/L) is displayed for one second and then "Stor" to confirm that the new calibration data has been accepted.

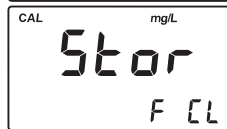
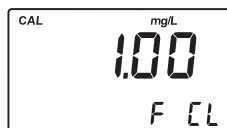


The meter automatically enters in measurement mode.

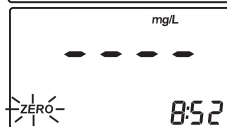

## CALIBRATION ERROR MESSAGES

- The calibration is successfully performed if the CAL CHECK™ readings is in certain limits. If the CAL CHECK™ standard value is too high, the display will show “-HI-” on the primary display and “Err” on the secondary display. If this message appears, check if the correct cuvet was used.
- If the CAL CHECK™ standard value is too low, the display will show “-LO-” on the primary display and “Err” on the secondary display. If this message appears, check if the correct cuvet was used.

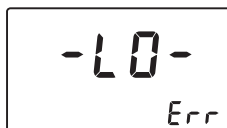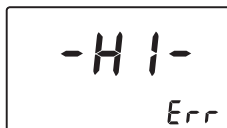

## CALIBRATION DELETION

**HI 93414** is delivered factory calibrated. It is possible to restore factory calibration at any time if the user calibration do not work as expected.


**Note:** Deleting the user calibration for one range will not affect the other ranges.

To delete last calibration, follow next steps:

- Enter the GLP feature by pressing RCL/GLP for 3 seconds.

The date of the last calibration will be displayed on the LCD.


If no calibration was performed, the “F.CAL” message appears on the LCD and the instrument returns to measurement mode.

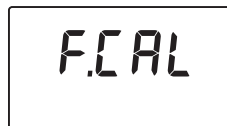

- Press READ/TIMER ► to see the information related to calibration. The last panel is the one with delete calibration.



- Press SETUP/DEL to delete the current calibration. The instrument will restore the factory calibration and will automatically return to measurement mode.

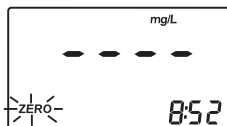

## LOGGING

HI 93414 has a logging memory of 200 records. The log memory is unique for all ranges. The records are stored in chronological order. With each measurement, the range, date, time, and tag ID are stored. In this way, each record is fully characterized and can be easily analyzed when downloading on the PC application (HI 92000).

### LOGGING

The log function is active only after a valid measurement is obtained (no errors).

- To log a value, press LOG/CFM when the measurement result is displayed.

The instrument asks to READ TAG for identification of the sampling location. The number for the new record is also displayed on the secondary LCD.





- To read the ID code for the sampling location identification, simply touch the iButton® tag with the matching connector, located on the back of the instrument (see page 10, "Connectors Description"). Alternatively, press again LOG/CFM to store the record without the tag ID code.
- If the tag is successfully read, the instrument will beep once, displaying the unique hexadecimal code of the tag, and store the data.

After data is stored, the instrument returns to measurement mode.

- Notes:**
- If the tag is not read within 20 seconds, the logging procedure is canceled.
  - A measurement can be stored only once. Also an over range value can be stored.

- If less than ten free records are available, the "LOG" tag will blink while storing data.
- If the log memory is full, the "LoG FULL" message appears for two seconds on the LCD and the instrument returns to measurement mode without storing the new record.

To store a new record, delete one or more records.

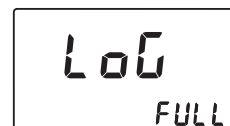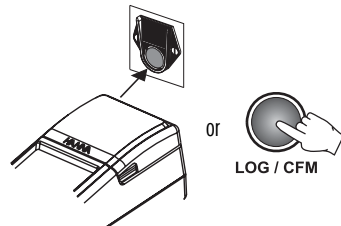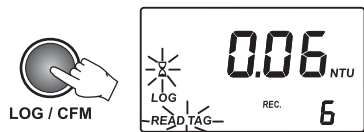

## VIEW LOGGED DATA

The stored records can be viewed at any moment by pressing RCL/GLP. To return to normal measurement mode press RCL/GLP again.

### LOG SEARCHING

The log records are stored in chronological order. The first displayed record is the last stored one.

- Press UP or DOWN keys to scroll the log memory record by record. By keeping pressed the UP or DOWN keys, the scrolling speed will increase. The scrolling of the log is possible from any panel of the record, except "Delete last log" and "Delete all logs" panels.
- When scrolling the log, the record number is displayed for one second on the secondary LCD, together with "TAG", if the identification of the sampling location was made. After this, the range is displayed on the secondary LCD as "turb", "F.Cl" or "t.Cl".

When the end of the log is reached, a long beep will be heard.



### RECORD VIEWING

Each record contains more information than the measured value. The additional information is grouped in several panels.

Press READ/TIMER ► to scroll through the record panels. The record panels are displayed one by one in a circular way.

Each record contains the following panels:

- The record value (turbidity, free or total chlorine value) and range.

**Note:** If the logged sample value is an over range reading, the maximum value will be displayed blinking.

- The hexadecimal string of the tag for the sampling location ID.


**Note:** If the ID data is missing, dashes are displayed instead.



- Measurement date in YYYY.MM.DD format.



- Measurement time in hh:mm format.

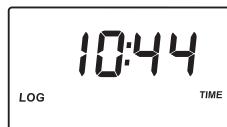

- Delete the last record panel (only for last record).



- Delete all records.



### DELETE LAST RECORD

To log other values, the last record or all records have to be deleted.

- To delete the last record, press SETUP/DEL while in delete last records panel.



- The instrument asks for confirmation and if LOG/CFM is pressed, the last record is deleted. To abort the delete function, press READ/TIMER ► instead of LOG/CFM.



- After the record is deleted, the instrument enters immediately in the first panel of the previous record. If the log becomes empty, dashes will be displayed for one second on the LCD and the instrument will return to idle mode.



### DELETE ALL RECORDS

To delete all records, scroll the log until delete all records panel is displayed on the LCD.


- To delete all records press SETUP/DEL while in delete all records panel.



- The instrument asks for confirmation and if LOG/CFM is pressed, all records are deleted. To abort the delete function, press READ/TIMER ► instead of LOG/CFM.



- After all records are deleted, dashes are displayed for one second on the LCD and the instrument returns to measurement mode.

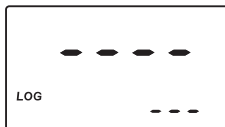

## GOOD LABORATORY PRACTICE (GLP)

The GLP feature allows the user to view last calibration data. Also, the user calibration can be deleted.

- Press and hold RCL/GLP for 3 seconds to enter/exit GLP data consulting.


Several functions are available when in GLP menu.




- Press READ/TIMER ► to scroll the following GLP data:




- The last calibration date, in YYYY.MM.DD format. If no calibration was performed, the factory calibration message, "F.CAL", will be displayed on the LCD.




- The time of the last calibration in hh:mm format.

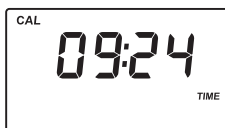

- First calibration point - only for turbidimeter range. The displayed value is 0.00 NTU if the first calibration point was skipped or the real read value will appear.



- Second calibration point - only for turbidimeter range.

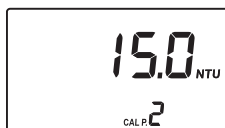




- Third calibration point - only for turbidimeter range (if available).



- Fourth calibration point - only for turbidimeter range (if available).

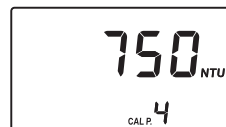

- Delete calibration panel.



To delete last calibration:


- Press SETUP/DEL while in the delete calibration panel of the GLP.



The user calibration will be deleted and the factory calibration will be restored.



The instrument will enter automatically in measurement mode.

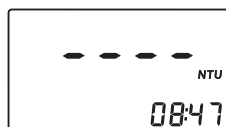

## SETUP


Setup mode allows viewing and modifying the instrument parameters.

The blinking "CAL" tag during setup mode suggest to press CAL/CHECK for parameters editing.

- To enter/exit SETUP, press SETUP/DEL.



- To select the parameter to be edit, press UP or DOWN keys until the desired panel is displayed. Press UP or DOWN keys also to change the value of a parameter.



- To start/stop editing a parameter, press CAL/CHECK.




- To save the new selected value of a parameter, press LOG/CFM.



### SET EPA COMPLIANCE MODE (for turbidimeter range only)

When EPA compliance reading is ON, "EPA" tag is displayed on the LCD and the reported values are rounded to meet EPA reporting requirements.

- To start edit the EPA mode, press CAL/CHECK when EPA compliance reading panel is displayed. The parameter setting and "CFM" tag will start blinking.

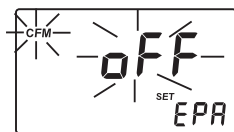

- Press the UP or DOWN keys to set ON or OFF the EPA compliance mode.




- Press LOG/CFM to save the setting. The new selected option of the parameter will be displayed on the LCD. Alternatively, press CAL/CHECK to exit without saving the new settings.



## SET BEEPER

The **HI 93414** has a built in beeper that signals the tag read, the key press and the error conditions. The beeper can be selected to be ON or OFF.


- To set the beeper ON/OFF, press CAL/CHECK when set beeper panel is displayed. The beeper status and “CFM” tag will start blinking.

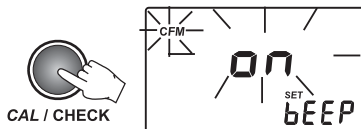

- Press the UP or DOWN keys to set the beeper ON/OFF.




- Press LOG/CFM to save the change. The new selected option will be displayed on the LCD. Alternatively, press CAL/CHECK to exit without saving the changes.

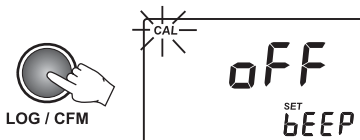

## SHOW / HIDE THE TIME

You can choose between showing or hiding the current time on the LCD.


- To set hiding or showing the time, press CAL/CHECK when show/hide time panel is displayed. The time show status and “CFM” tag will start blinking.

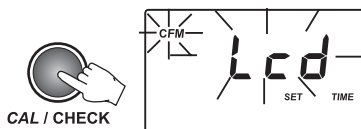

- Press the UP or DOWN keys to set lcd / hide for time.



- Press LOG/CFM to save the change. The new selected option will be displayed on the LCD. Alternatively, press CAL/CHECK to exit without saving the changes.

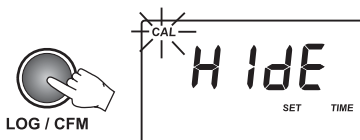

## SET THE DATE

The **HI 93414** turbidimeter has a built-in real time clock (RTC). The RTC time is used to generate a unique time stamp for each recorded value and to automatically store the last calibration date. The current time can be displayed on the LCD when the instrument is in idle mode.

- To set the current date, press CAL/CHECK when set date panel is displayed. The date format is YYYY.MM.DD. The last two digits of the year value and “CFM” tag will start blinking.



- Press the UP or DOWN keys to set the year value.



- Press LOG/CFM or READ/TIMER ► to start editing the month value. The month value will start blinking.



- Press the UP or DOWN keys to set the month value.



- Press LOG/CFM or READ/TIMER ► to start editing the day value. The day value will start blinking.




- Press the UP or DOWN keys to set the day value.



**Note:** To edit the year again, after the day was edited, press READ/TIMER ►.

- Press LOG/CFM to save the new date. The new set date will be displayed. Alternatively, press CAL/CHECK to exit without saving the changes.

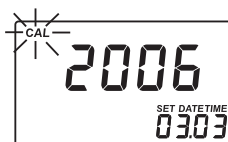

## SET THE TIME


- To set the current time, press CAL/CHECK when set time panel is displayed. The time format is hh:mm. The hour value and “CFM” tag will start blinking.



- Press the UP or DOWN keys to set the hour value.



- Press LOG/CFM or READ/TIMER ► to start editing the minutes. The minutes value will start blinking.

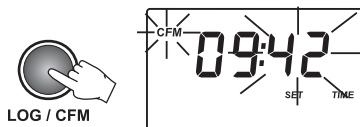


- Press the UP or DOWN keys to set the minutes value.



**Note:** To edit the hour again, after the minutes were edited, press READ/TIMER ►.


- Press LOG/CFM to save the new time. The new set time will be displayed. Alternatively, press CAL/CHECK to exit without saving the changes.

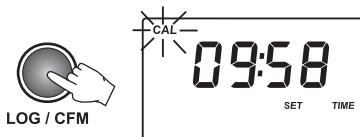

## SET INSTRUMENT ID

The instrument ID is a four digit number that can be edited by the user. The instrument ID is downloaded on the PC application, together with the logged data. By setting a different ID for each instrument it is possible to mix information from many turbidimeters into the same database.


- To set the instrument ID, press CAL/CHECK when set instrument ID panel is displayed. The default instrument ID is 0000. The existing ID value and "CFM" tag will start blinking.

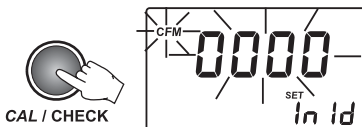

- Press the UP or DOWN keys to set the new instrument ID. By pressing and holding the UP or DOWN keys, the speed will increase.



- Press LOG/CFM to save the change. The new instrument ID will be displayed. Alternatively, press CAL/CHECK to exit without saving the changes.

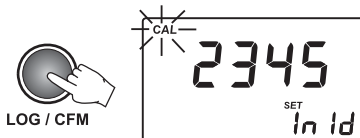


## SET BAUD RATE

The **HI 93414** has a RS232 and a USB link. When the USB connection is used, the RS232 connection becomes inactive.

To successfully communicate with the PC, the same baud rate must be selected on the instrument and on the PC application. The available baud rates are 1200, 2400, 4800 and 9600.


- To set the baud rate, press CAL/CHECK when set baud rate panel is displayed. The parameter value and "CFM" tag will start blinking.

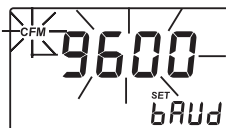

- Press the UP or DOWN keys to select the new baud rate value.



- Press LOG/CFM to save the change. The new selected baud rate will be displayed. Alternatively, press CAL/CHECK to exit without saving the changes.

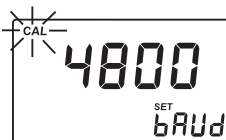

## LCD BACKLIGHT

The LCD can be illuminated to allow the user to see the readings even in dark environments.

To turn ON/OFF the backlight, press LIGHT.


The backlight will automatically shut-off after 25 seconds of non-use to save the battery life.



## TAG INSTALLATION

The tag is housed in a rugged metal that can withstand harsh environments. However, it is better to protect the tag from direct rain.

Place the tag near a sampling point. Fix it securely with the provided screws, in such a way that the metallic iButton® is easily accessible for reading the tag.

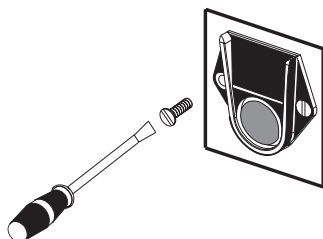


The number of tags that can be installed is practically unlimited. Additional tags can be ordered (HI 920005 - five tag holders with tags).

## LAMP REPLACEMENT

The instrument tungsten lamp has a life longer than 100,000 measurements. In case of lamp failure, the defective lamp can be easily replaced. When the lamp is broken, the instrument displays "no L" error message.

To replace the lamp follow the next steps:

- Remove the battery lid.
- Unscrew the lamp connection using a screwdriver.
- Unlock the lamp and extract it by pulling it out from the lamp holder handler.
- Place the new lamp in the right position and push it until it is securely locked.
- Insert the lamp leads into the connector and tight them using a screwdriver.

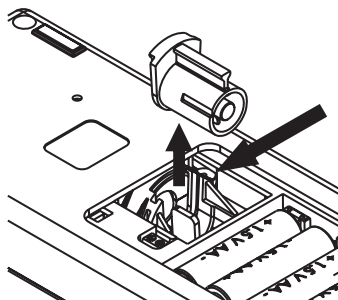

**Warning:** After lamp replacement the meter has to be recalibrated.

## BATTERIES MANAGEMENT



For field measurements, **HI 93414** is powered by 4 x 1.5V AA batteries. The battery life is enough for 1500 normal measurements. When the instrument is started, the remaining battery life is estimated and reported in percents.

To preserve the battery it is better to use normal instead of averaged measurements. Continuous measurements keep the lamp on and should be used with caution if the battery life is an issue. To further save the battery life, the instrument will turn off after 15 minutes of non-use. The backlight will be turn off after 25 seconds since the last key was pressed.

The battery life is measured each time the lamp is turned on and if the remaining battery life is less than 10%, the blinking battery tag will be displayed on the LCD to warn the user that the batteries need to be replaced.

When the batteries are completely discharged, "0% bAtt" message will be displayed on the LCD for one second and the instrument will turn off.


In order to use the instrument again, replace the batteries with new ones or use an AC adapter.

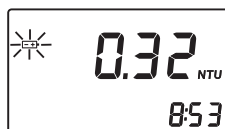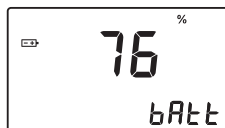

## BATTERIES REPLACEMENT

To replace the batteries follow the next steps:

- Press ON/OFF to turn OFF the instrument.
- Open the batteries cover by pressing the locking clip.
- Take out the used batteries and insert 4 new 1.5V AA size batteries, while paying attention to the correct polarity as indicated on the battery compartment.

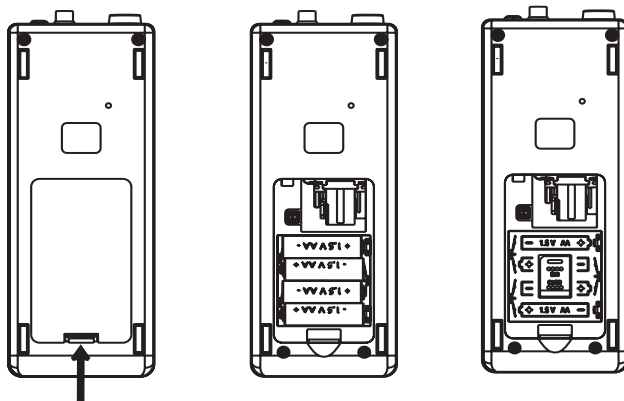



- Replace the cover and press it until it locks.
- Turn the instrument ON.

**Warning:** Replace batteries only in a non-hazardous area.

### **USING AN AC ADAPTER**

The **HI 93414** can be powered from the AC adapter when used in laboratory. See the Accessories section to select the correct AC adapter.

To power the instrument, simply connect the AC adapter to the instrument (see page 10, “Connectors Description”).

It is not necessary to turn the instrument off when connecting the external adapter.

**Note:** The connection to the external adapter will not recharge the batteries.

## PC INTERFACE

To fully use the instrument tag identification system function, the measured data has to be downloaded to a computer. The instrument can use RS232 or USB connection to communicate with the PC.

When using the RS232 protocol, simply connect a **HI 920011** serial cable between the instrument and the computer.

To use the USB protocol, simply connect a regular USB cable between instrument and PC.

In both cases, the PC must run the **HI 92000** application for successful data transfer.

## ERROR CODES

**HI 93414** has a powerful diagnostic system. The common errors are detected and reported for easy diagnostic and maintenance.

ERROR	DESCRIPTION	ACTION
Err1 – Err3; Err6, Err7, Err8	Critical errors The instrument beeps and shuts down	Call Hama service
Err4	The instrument beeps shortly twice and shuts down after 10 seconds	Press simultaneously UP and DOWN to reset the EEPROM contents
OAP	The lid is not closed	Close the lid. If the error persists, return the instrument.
no L	Lamp broken or no light.	Replace the lamp. Check the optical system for obstructions
L Lo	Not enough light.	Check the optical system for obstructions
L H	Too much light.	Check the optical system for obstructions
-LO	The standard used for current calibration point is too low	Check the standard and use the correct one
-HI	The standard used for current calibration point is too high	Check the standard and use the correct one
Inv	Calibration standards are inverted	Check the standard and use the correct one
Battery tag blinking	The remaining battery life is too low	Replace batteries
bAtt	The batteries are too discharged for correct measurements	Replace batteries

## ACCESSORIES

### REAGENT SETS

HI 93414-11	CAL CHECK™ Calibration set for Free & Total Chlorine (1 set)
HI 93701-01	Reagents for 100 Free Chlorine tests
HI 93701-03	Reagents for 300 Free Chlorine tests
HI 93703-58	Silicon oil (15 mL)
HI 93711-01	Reagents for 100 Total Chlorine tests
HI 93711-03	Reagents for 300 Total Chlorine tests
HI 98703-11	Calibration set for turbidimeter(<0.1, 15, 100 and 750 NTU)

### OTHER ACCESSORIES

HI 710005	Voltage adapter from 115V to 12 Vdc (USA plug)
HI 710006	Voltage adapter from 230V to 12 Vdc (European plug)
HI 710012	Voltage adapter from 240V to 12 Vdc (UK plug)
HI 710013	Voltage adapter from 230V to 12 Vdc (South Africa plug)
HI 710014	Voltage adapter from 230V to 12 Vdc (Australia plug)
HI 731318	Tissue for wiping cuvetts (4 pcs.)
HI 731331	Glass cuvetts (4 pcs.)
HI 731335N	Caps for cuvetts (4 pcs.)
HI 740027P	1.5V AA battery (12 pcs.)
HI 740234	Replacement lamp for EPA turbidimeter (1 pcs.)
HI 92000	Windows® compatible software
HI 920005	5 tag holders with tags
HI 920011	5 to 9 pins RS232 connection cable
HI 93703-50	Cuvets cleaning solution (230 mL)

## RECOMMENDATIONS FOR USERS

Before using this product, make sure that it is entirely suitable for your specific application and for the environment in which it is used.

Operation of this instrument may cause unacceptable interferences to other electronic equipments, requiring the user to follow all necessary steps to correct interferences.

Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC performance.

To avoid damage or burns, do not put the instrument in microwave ovens. For your own and the instrument safety do not use or store the instrument in hazardous environments.

Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.

## SALES AND TECHNICAL SERVICE CONTACTS

### **Australia:**

Tel. (03) 9769.0666 • Fax (03) 9769.0699

### **China:**

Tel. (10) 88570068 • Fax (10) 88570060

### **Egypt:**

Tel. & Fax (02) 2758.683

### **Germany:**

Tel. (07851) 9129-0 • Fax (07851) 9129-99

### **Greece:**

Tel. (210) 823.5192 • Fax (210) 884.0210

### **Indonesia:**

Tel. (210) 4584.2941 • Fax (210) 4584.2942

### **Japan:**

Tel. (03) 3258.9565 • Fax (03) 3258.9567

### **Korea:**

Tel. (02) 2278.5147 • Fax (02) 2264.1729

### **Malaysia:**

Tel. (603) 5638.9940 • Fax (603) 5638.9829

### **Singapore:**

Tel. 6296.7118 • Fax 6291.6906

### **South Africa:**

Tel. (011) 615.6076 • Fax (011) 615.8582

### **Taiwan:**

Tel. 886.2.2739.3014 • Fax 886.2.2739.2983

### **Thailand:**

Tel. (662) 619.0708 • Fax (662) 619.0061

### **United Kingdom:**

Tel. (01525) 850.855 • Fax (01525) 853.668

### **USA:**

Tel. (401) 765.7500 • Fax (401) 765.7575

MAN93414  
02/06

*For e-mail contacts and a complete list of Sales and Technical offices, please see  
**[www.hannainst.com](http://www.hannainst.com)**.*